
Robert Abbey, Inc.

ASSEMBLY INSTRUCTIONS FOR YOUR REAL SIMPLE SWING ARM FLOOR LAMP

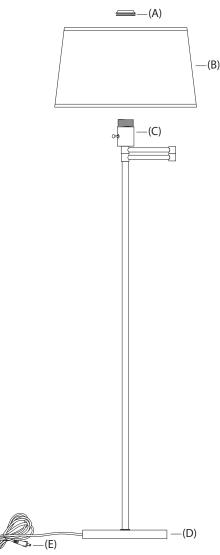

IMPORTANT SAFETY INSTRUCTIONS:

- * This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- * Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptacle.
- * Switch power off and remove plug from the wall outlet before replacing the bulb.

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect electricity until lamp is fully assembled.

- 1. Unpack all parts and discard packing materials.
- 2. Place base (D) on a level surface.
- 3. Remove flange (A) from socket (C).
- 4. Place shade (B) onto socket (C).
- 5. Thread flange (A) back onto socket (C) to secure shade to lamp.
- 6. Install one 150W maximum bulb into socket (C).
- 7. Remove protective plastic from plug (E).
- 8. Insert plug (E) into wall outlet.

** To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners. **