
Robert Abbey, Inc.

ASSEMBLY INSTRUCTIONS FOR YOUR

NINA CORTA FLUSH MOUNT

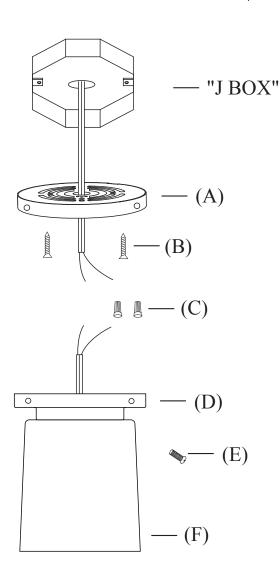

IMPORTANT SAFETY INSTRUCTIONS:

- *These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
- *DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down. DO NOT subject the bulb to any shock while lit as shattering of bulb may result.

NOTE: Do not connect the electricity until lamp is fully assembled.

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX / CIRCUIT BREAKER.
- 2. Remove all parts from the carton and place on a soft surface.
- 3. Remove mounting plate (A) from backplate (D) by removing backplate screws (E) provided.
- 4. Affix mounting plate (A) to "J BOX" with mounting plate screws (B).
- 5. Lift fixture to mounting plate and make proper electrical connection.
- 6. Connect the copper wire from fixture to ground (green) wire. Connect white or rough side of wire from fixture to white wire from outlet box using wire nuts (C). Connect black or smooth side of wire from fixture to black wire from outlet box using wire nuts (C).
- 7. Align holes in backplate (D) with holes in mounting plate (A). Slide backplate (D) over mounting plate (A). Thread backplate screws (E) into backplate (D) and mounting plate (A) to secure fixture to mounting plate (A).
- 8. Install one (1) 60W Max. Torepedo bulb in socket.

Care Instructions: To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaniers.